


CrystalView Mini

Twisted Pair KVM Extender

Quick Start Guide

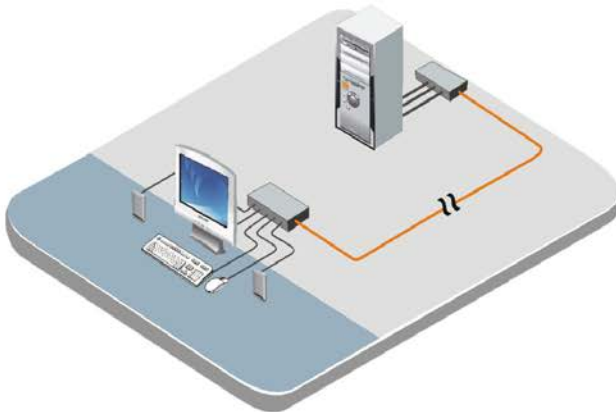

ROSE.COM



10707 Stancliff Road
Houston, Texas 77099

Phone (713) 933-7673
www.rose.com


Using the CD

Insert the provided CD and the Product Document selection window will automatically display. Select the product and the Manual, DataSheet, and QuickStart document window will display. Select the document to display or print. Documents are in PDF format.


Setting Cable length dip switch

For cable lengths over 75 feet the dip switch 1 located on the bottom of the unit may need to be set to compensate for the longer cable length. To set switch 1, turn the unit over and using a small pointed object like a paper clip, slide switch 1 to the "ON" position.

Note: the CrystalView Mini supports cable lengths up to 150 feet.

MINI	
	
DIP SWITCH 1	
Cable length	Switch 1 Setting
0-75 feet	OFF
76-150 feet	ON

Connecting the Cables

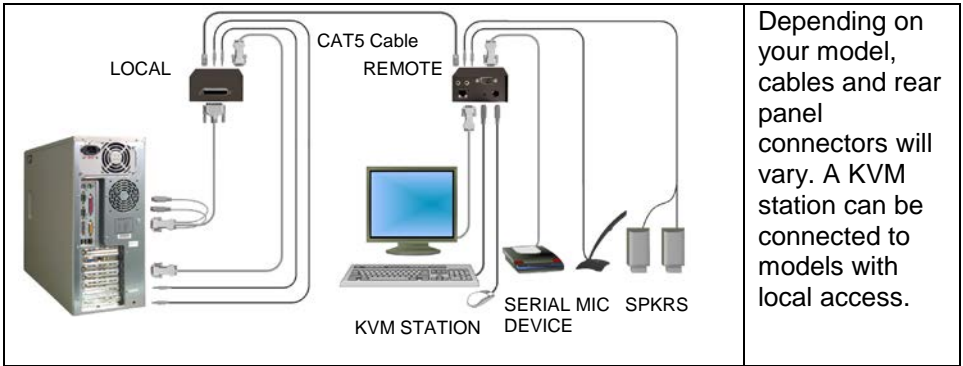

Unit	Function	Command
Remote	Private Mode	N/A
Local	Private Mode	Scroll Lock
Remote	Reset	Press Scroll Lock
Local Dual	Reset	Press Scroll Lock twice
Remote	Null Mouse	Hold left and right mouse buttons down then press Scroll Lock
Local Dual	Null Mouse	Hold left and right mouse buttons down, then press Scroll Lock

Operating instructions- All units

Once the Remote and Local Units are connected and configured, the Remote KVM station's keyboard, video monitor and mouse will function as if it were directly connected to the CPU. All applications, upgrades and PC configurations can be performed normally

Operating instructions – Dual unit

KVM Switching

The CrystalView Mini “Dual” version allows for an additional KVM station to be connected to the Local Unit. The CPU can be operated from the Remote or Local KVM station but not simultaneously. The Local Unit is active during boot-up. To activate the Remote KVM station, simply press any key on the Remote KVM stations keyboard or move the mouse. To activate the Local KVM station, press any key on the Local KVM station's keyboard or move its mouse.

A lockout feature disables activity from a KVM station until the “In Use” KVM stations keyboard or mouse are inactive for more than 2 seconds. After 2 seconds of inactivity, pressing any key on the “Not in Use” KVMs keyboard or moving the mouse will activate that KVM station and lockout the other KVM station.



Server Management



Solutions